



**DIY Harness Installation Kit  
for Striker LED  
User Instructions**

# DIY HARNESS INSTALLATION KIT INSTRUCTIONS

## DIY HARNESS INSTALLATION KIT CONTENTS

- 1 x Driving light harness
- 1 x HB3 patch harness
- 1 x H4 patch harness
- 1 x Switch loom
- 1 x Screw for relay installation
- 4 x T-taps for wires (2 sizes)
- 4 x Spare crimps for custom wiring
- 6 x Spade terminals (2 sizes)
- 10 x Cable ties
- 1 x User Instructions.

## TOOLS AND CONSUMABLES REQUIRED

- Spanner to access battery terminals
- Pointy nose pliers
- Wire cutters
- Drill
- 12mm drill bit
- Phillips head driver bit
- Torch (recommended)
- Torque Wrench (recommended).

## TOOL REQUIRED FOR NON-STANDARD INSTALLATIONS

- Crimping tool.

## PERSONAL SAFETY WARNING

**WARNING: High intensity light source.**


Do not look directly into the light during operation, eye injury may result.

**Visit [lightforce.com/installations](https://lightforce.com/installations) to view instructional videos.**

# DIY HARNESS INSTALLATION KIT INSTRUCTIONS

**Fig 1. Driving Light Harness**

1. 40 amp Relay
2. Insulated sleeved wires
3. Battery connector (negative)
4. Battery connector (positive)
5. 15 amp fuse
6. Driving light connectors
7. High beam pickup wire with bullet terminal (negative)
8. High beam pickup wire with bullet terminal (positive)
9. Dashboard switch loom connector
10. Dash illumination cable (optional).

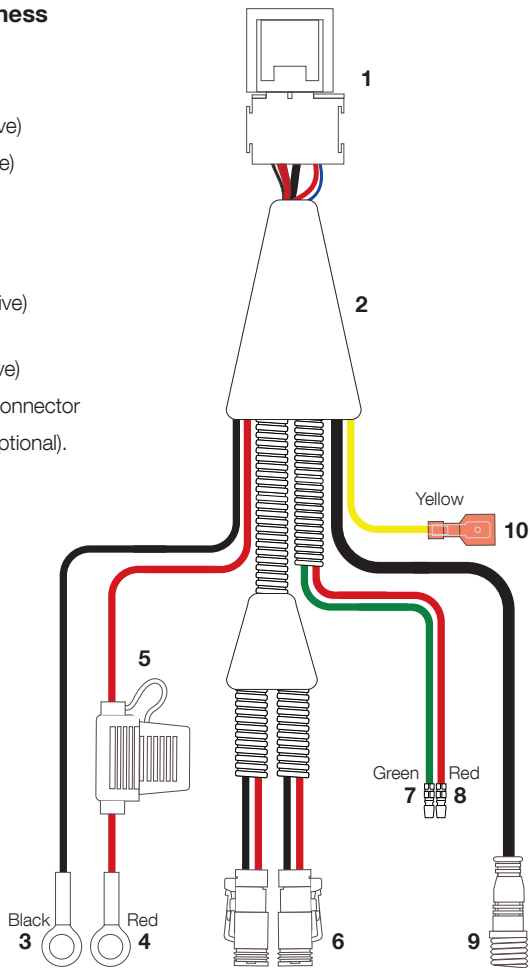

**Fig 2. Screw for fixing relay**



**Fig 3. Connectors for non-standard installations**



T-taps for wires



Insulated male spade terminals



Un-insulated male spade terminal

# DIY HARNESS INSTALLATION KIT INSTRUCTIONS

## STEP 1. MOUNT THE LIGHTS

1. Install the Striker LED driving lights onto a suitable mounting surface. Consult the user instructions for more information.

## WIRING HARNESS INSTALLATION



### STEP 2. INSTALL THE RELAY AND CONNECT THE LIGHTS

1. Remove the main ground wire from the negative battery terminal. **WARNING:** This may result in loss of radio security code and clock settings. Please consult your owner's manual before disconnecting
2. Mount the 40 amp relay (see figure 1) in a suitable place within the engine bay, using the screw supplied (figure 2) and your drill with a Phillips head driver bit. Ensure that the red (positive) and black (negative) ring terminals reach the appropriate battery terminals. **DO NOT CONNECT TERMINALS TO THE BATTERY AT THIS STAGE**
3. Route the insulated sleeved wires that run from the relay to the driving light connectors to each of your installed Striker LED Driving Lights and connect the driving light connectors to the back of each light. Ensure that cables do not touch the radiator or come in contact with any sharp edges
4. Secure all excess wire to the vehicle with cable ties supplied.

### STEP 3. CONNECT PATCH HARNESS TO HEADLIGHT CONNECTOR

1. Select the HB3 or H4 patch harness (refer to your vehicle's owner's manual and figures 4 and 5 below) to determine which is correct) and connect it to a headlight connector on your vehicle. If your headlights are a type other than HB3 or H4, see item 3 below
2. Connect the high beam pickup wires on the driving light harness to the patch harness, red to red, green to green

3. **NOTE:** if you are installing into a vehicle with headlights that are NOT HB3 or H4, you will need to remove the bullet terminals on the red and green high beam pickup wires on the driving light harness (see figure 1) and crimp each wire into a blue insulated male spade terminals using a crimping tool. Then clamp the provided t-taps to the high beam wires on one of the vehicle's headlights. Use the red or blue t-taps depending on the wire diameter. Finally, connect the blue insulated male spade terminals into the t-taps on the harness.

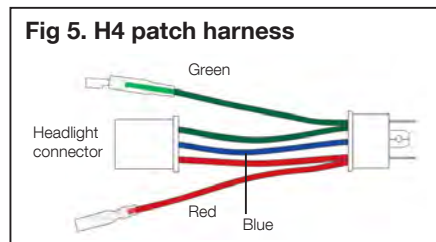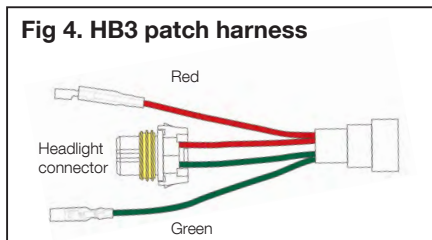

# DIY HARNESS INSTALLATION KIT INSTRUCTIONS

## STEP 4. INSTALL THE DASH SWITCH

1. Find a suitable place on the dash to mount the dash switch.
2. Disconnect the spade terminals at the back of the dash switch (refer to figure 7 below)
3. Unscrew the plastic nut from the rear of the dash switch
4. Carefully drill a hole for the dash switch using a 12mm drill bit
5. Push the dash switch through the hole, re-fit the plastic nut and reconnect the spade terminals to the dash switch according to the switch wiring diagram in Figure 6.

## STEP 5. CONNECT THE DASHBOARD SWITCH LOOM

1. Route the dashboard switch loom connector (on the driving light harness) carefully through the vehicle's firewall using pointy nose pliers to pull the cable through. A torch will help you to see what you are doing. Be careful to avoid crushing the connector. Ensure the wires are kept away from any heat sources
2. Connect the dashboard switch loom connector on the driving light harness (see item 1, figure 1) to the dashboard switch loom pictured in Figure 7 below. Note that this standard switch illuminates only when turned on.

If you are using a different switch with dash illumination (not included), connect the dash illumination cable (on the switch loom) to your switch, as directed by the user instructions for the switch.

## STEP 6. CONNECT TO THE BATTERY

1. Connect the ring on the red wired battery connector to the positive battery terminal using a spanner
2. Connect the ring on the black wired battery connector to the negative battery terminal using a spanner.


## STEP 7. SECURE CABLES

1. Use the supplied cable ties to secure all loose cables and remove excess using wire cutters.


## STEP 8. TEST

1. Turn on the ignition and test correct light operation by switching on your high beam. Ensure the lights only activate when switched to high beam.

**Fig 6. Dash switch wiring (front view)**

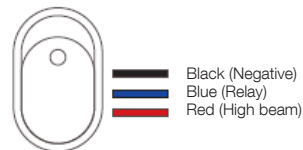

**Fig 7. Dashboard switch loom**

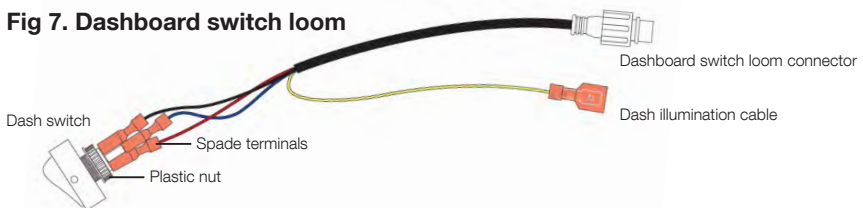

THIS PAGE IS INTENTIONALLY BLANK

THIS PAGE IS INTENTIONALLY BLANK



**For warranty information and to register your product for  
warranty purposes, visit [lightforce.com/warranty](http://lightforce.com/warranty)**

**LIGHTFORCE AUSTRALIA PTY LTD**

11 Manton Street, Hindmarsh SA 5007 Australia

[www.lightforce.com](http://www.lightforce.com) • Email: [sales@lightforce.com](mailto:sales@lightforce.com)

Australia Telephone: 08 8440 0888 | Fax: 08 8346 0504

International Telephone: +61 8 8440 0888 | Fax: +61 8 8346 0504

All logos and images are subject to relevant trademark and copyright protection Lightforce Pty Ltd. Copyright © 2018. Data and specifications contained maybe subject to change without notice. Lightforce Australia Pty Ltd shall not be liable for damage, malfunction, failure resulting from accident, misuse, misapplication, unauthorised repair, neglect, modification, unauthorised or non standard replacement parts, accessories, bulbs, batteries or voltage or operation of the product beyond its technical and or environmental specification.